

2D Barcode Scanner

User's Simple Manual

Manual introduction

This user manual covers code system settings, function settings (such as lighting, keyboard type, and factory reset, etc.) and interface settings. If you need to change the functions you require, simply scan the corresponding configuration code. All items marked with (*) indicate the default factory settings.

System Settings

Default factory settings



Factory default configuration

Note: The parts marked with "*" represent the factory default settings and are not related to the interface type.

Interface



USB-KBW



USB-COM



RS-232

Barcode types



Activate 1D codes(*)



Disable 1D code



Activate 2D codes(*)



Disable 2D code

Scan mode



Manual mode(*)



Automatic mode



Inductive mode

Low brightness inductive lighting



OFF(*)



ON

Sound settings



ON(*)



OFF

Vibration settings



OFF



ON(*)

illumination settings



OFF



ON(*)

Aiming settings



OFF



ON(*)



V2.0.2

USB-KBW Settings

☐ Control characters ASCII (0 to 31)



ALT+Numbers ON



OFF(*)

☐ Standard characters ASCII (32 - 127)



ALT+Numbers ON



OFF(*)

☐ Keyboard character output



Original data
output(*)



TXT、Excel



Word

☐ Data output encoding type



GBK(*)



UTF8

☐ Case conversion



Convert All to
Upper Case



Convert All to
Lower Case



Case interchange



No Conversion(*)

☐ Terminator settings



Add CR (*)



Cancel CR



Add LF



Cancel LF(*)

☐ CapsLock status settings



CapsLock OFF



CapsLock ON(*)

☐ Keyboard layout settings



USA(*)



Russia



French



Germany



Japan



Spain



Turkey Q

RS-232 Settings

☐ Baud rate settings



1200bps



2400bps



4800bps



9600bps(*)



19200bps



38400bps



57600bps



115200bps